



2 in 1 Hair Straightener & Curler

SY-PP17


Instructions Manual

WELCOME

Thank you for purchasing the 2 in 1 Hair Straightener & Curler SY-PP17. In order to fully benefit from this product please read the following instructions carefully and store this user manual in a safe place for future reference.

PARTS OF THE SY-PP17

1. Exterior Housing
2. Pilot light
3. On/Off switch and mode selector
4. Cord protection swivel

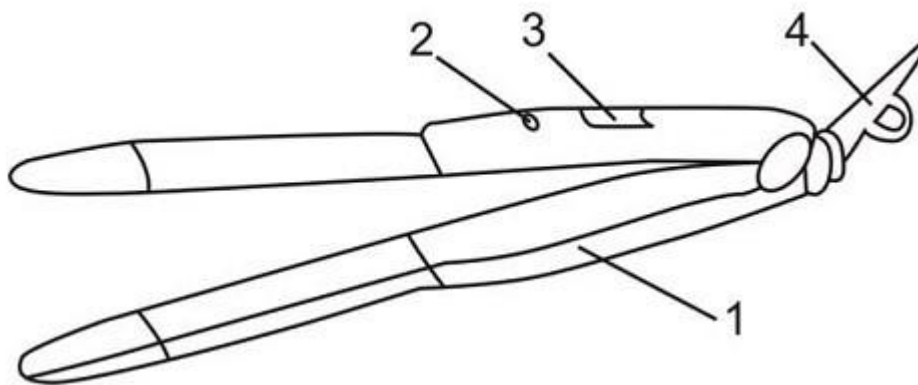

IMPORTANT SAFEGUARDS

- Before the first use of the appliance check that the voltage indicated on the rating label corresponds to the mains voltage in your home.
- For home use only. Do not use for industrial purposes. Do not use the appliance for any other purposes than described in this instruction manual.
- Do not use outdoors.
- Always unplug the appliance from the power supply before cleaning and when not in use.
- To prevent risk of electric shock and fire, do not immerse the appliance in water or any other liquids. However if this does occur DO NOT TOUCH the appliance, unplug it immediately and contact your near service center.
- Do not take this product to a bathroom or use near water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance switched on when you do not use it.
- Do not use different attachments other than those supplied.
- Do not operate after malfunction or if the cord is damaged.

- Do not attempt to repair, adjust or replace parts in the appliance. Repair the malfunctioning appliance in the nearest service center.
- To protect against the risk of severe burns, do not touch the heating plates.

CAUTION:

- Be careful, the device becomes very hot during operation.
- If the device is plugged in the socket or it is cooling off after using, do not place the device on an unprotected surface or lean it against the power cord.
- The device is to be used only on dry clean hair or towel-dried hair.
- The manufacturer reserves the right to introduce minor changes into the product design without prior notice, unless such changes influence significantly the product safety, performance, and functions.

INSTRUCTION FOR USE

STRAIGHTENING

- Before using always make sure that the cord is straightened out.
- Insert the plug into the power socket; the indicator light should light up. Allow the appliance to heat for a few minutes.
- You can choose one of the two operation modes. Lower temperature is recommended for straightening thin hair (mode 1), while for straightening thicker hair the higher temperature mode should be set (mode 2).
- Before using it on your hair, divide the hair into thin strands of hair.
- To straighten the hair, place it between the straightening plates and gently slide it downwards. Repeat this process 2-4 times.

CURLING

- In order to curl your hair you must divide your hair into thin strands
- Take one strand of hair at a time and curl it around the curling plate of the unit. (During this time be very careful not to touch the curling plate with your hands)
- Hold the strand of hair for approximately 5-10 seconds and then release the hair strand. Repeat this process with the rest of the hair strands until the process has been completed.
- Do not comb the hair just after curling; wait until it cools down completely.
- Unplug the appliance from the power supply and allow it to cool down.

NOTE: Do not use the appliance longer than 15-20 minutes.

NOTE: In order to get more defined curls, hold the hair strands around the curling plate for a few extra seconds.

CARE AND CLEANING

- Before cleaning switch off the appliance, unplug it from the power supply and let it cool down completely.
- Do not use chemical liquids or abrasive cleaners to clean the unit.

STORAGE

- Make sure that the hair straightener is completely cool and dry before storing.
- Do not wrap the cord around the appliance as this may cause damage to the cord.
- Keep the appliance in a cool and dry place.
- Place the unit in a safe place away from water and places where it can suffer damages.

SPECIFICATIONS

- 2 in 1 Straightener &Curler
- Flat plates for a perfect straightened hairstyle and curved plates for a curled hairstyle
- Professional black ceramic plates which helps to maintain straight and shinny hair
- The special ceramicplates help to distribute the heat uniformly and evenly.
- Plates heat up in less than 1 minute
- Maximum temperature (190°C ~ 39W)
- 2 temperature setting control
- LED power indicator
- 360°swivelcord
- Lock button (Blocks the straightener to open)
- On / Off switch button
- Constant temperature which helps to gain a perfect and optimum result

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.

Address: Pol. Ind. La Raya. C/ Guadalquivir, 2.

Camarma de Esteruelas, 28816 Madrid

Tel: 902 430 967

Fax: 91 8864285

NIF: B83254763

Manufacturing country: China

Sytech® SY-PP17 complies with the following directives:

EMC Standard: Directive 2004/108/EC

EN 55014-1:2006+A1:2009

EN 55014-2:1997+A1:2001+A2:2008

EN 6100-3-2:2006+A1:2009+A2:2009

EN 61000-3-3:2008

LVD Standard: Directive 2006/95/EC

EN 60335-1:2002+A1:2004+A11:2004+A2:2006

+A12:2006+A13:2008

EN 60335-2-23:2003+A1:2008

ROHS standard: 2002/95/EC Restriction of Hazardous Substance

Signed: Ajeet Nebhwani Utamchandani

Sole Administrator

